



UVGERMI®

ULTRAVIOLETS DE HAUTE TECHNOLOGIE

*Specialist in
microbiological treatment of surfaces
using ultraviolet reactors.*

● ○ ● MADE IN FRANCE

20000321_A_FT10

UV GERMI BAL 2Z60 PORTABLE LAMP

UV GERMI BAL 2Z60 is a portable lamp used to decontaminate dry, inert surfaces



Full warranty: 2 years (excluding lamp)
After-sales in France

TECHNICAL SPECIFICATIONS

Equipment to destroy microorganisms, bacteria and viruses on surfaces, with exposure times of between 3 and 450 seconds depending on the removal rate required (see table overleaf).

UV LAMP

Total electrical power: 60 Watts (1 lamp)
Germicidal power: 19 Watts UVc
Lamp service life: 1 year

DIMENSIONS AND WEIGHT

Length: 705 mm
Width: 72 mm
Height: 48 mm
Weight: 1.70 kg

POWER

Power supply: 230 V
Max power: 70 W

CONTROL BOX

ON/OFF switch
2.90 m cable

UV 60 W LQ:P

Ref. 14000134

20000321_A_FT10


PORTABLE LAMP

UV GERMI BAL 2Z60

		DURÉES D'EXPOSITION (S)							
		Distance lampe- surface (cm)							
Abattement*		0	5 cm	10 cm	20 cm	40 cm ¹	50 cm ¹	75 cm ²	100 cm ²
90 %	Dose UVC (mJ/cm ²) 24	2	4	7	12	30	40	100	150
99 %	48	3	8	14	24	60	80	200	300
99.90 %	72	5	12	21	36	90	120	300	450

1 : avec une largeur du faisceau maximum de 30 cm / 2 : avec une largeur du faisceau maximum de 40 cm * :

*** : sur SRAS - COVID 1 (sur surfaces exposées)**

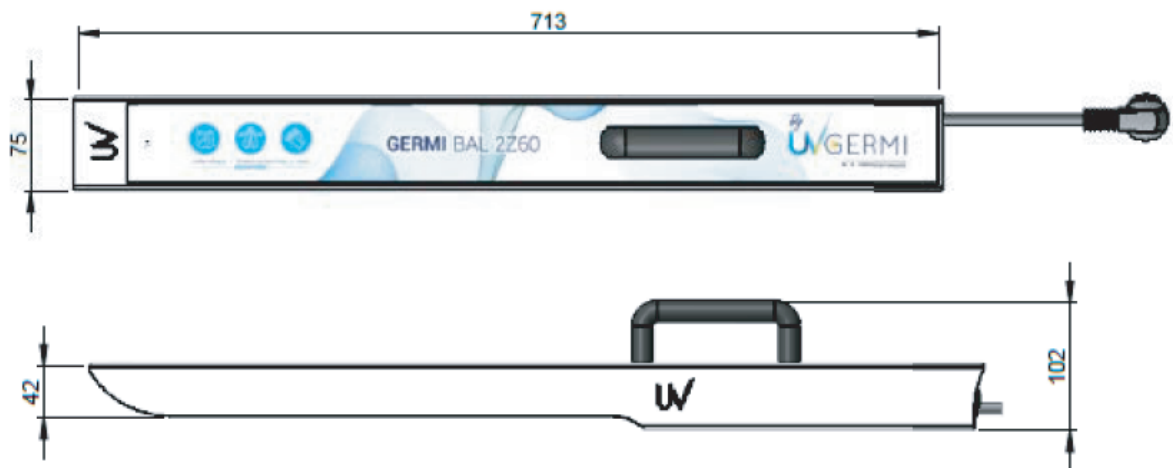

USE - WARNING - MAINTENANCE

The **UV GERMI 2Z60 PORTABLE LAMP** can be plugged into a standard 230 V socket.

Before use, put on all the personal protective equipment required when using partly open UVC light sources.

Maintenance is limited to the replacement of the UV lamp. The UV lamp has a maximal service life of 9,000 hours, after which disinfection is no longer guaranteed.

Radiation can be lost if deposits form on the UV lamp. These deposits can be created by the presence of dust or if the lamp is handled without protective gloves.

To keep the lamp clean, we recommend cleaning it regularly with a soft cloth dampened with alcohol.